

# Cambio de contraseña en router TP-LINK

## Paso 1:

Para configurar la nueva contraseña debemos entrar en el router, y para ello colocamos en la barra del navegador la siguiente dirección IP [192.168.1.1](http://192.168.1.1).



## Paso 2:


Cuando hayamos colocado la IP en la barra de navegación y demos clic a la tecla de entrar nos pedirá las claves para acceder al router que son por defecto:

Nombre de usuario: [admin](#)

Contraseña: [admin](#)


## Paso 3:

En este paso, ya hemos entrado al router inalámbrico, lo que vamos a hacer a continuación es ir al apartado de Wireless/Wireless Security, que está en el menú desplegable de la izquierda.

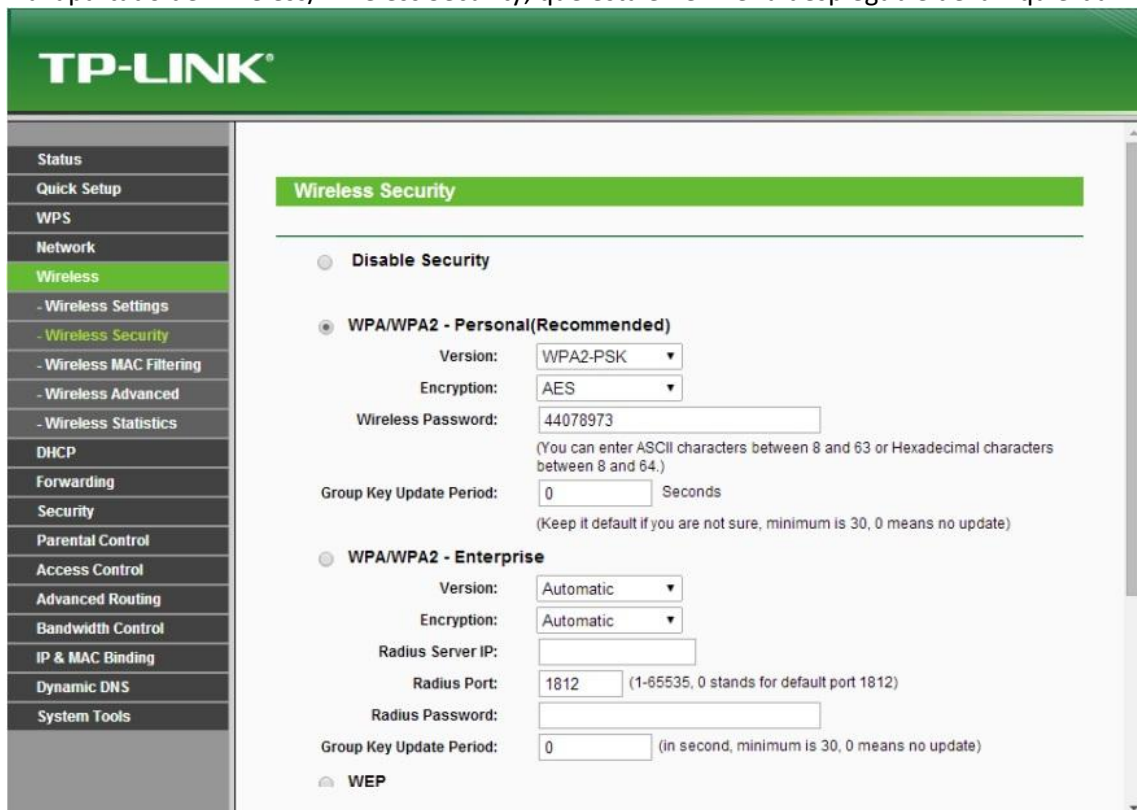

#### Paso 4:

Por defecto nos vendrá a una contraseña, pero podemos cambiarla a nuestra comodidad en:

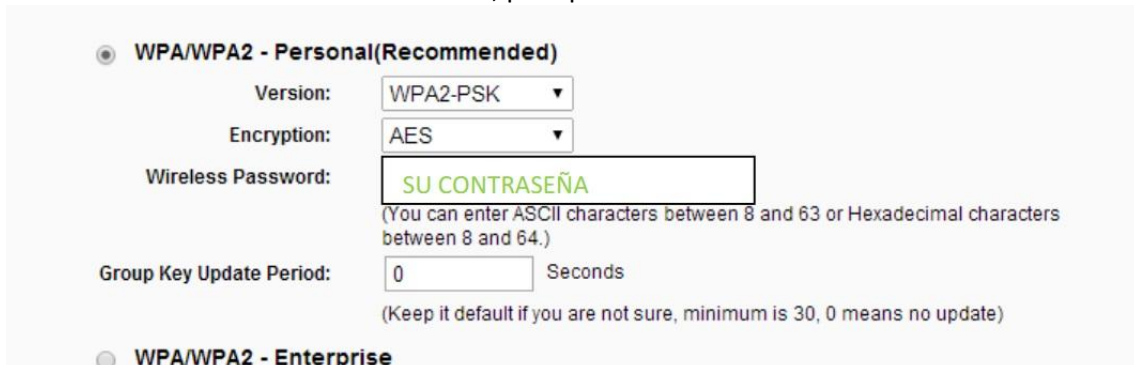

The screenshot shows the configuration interface for WPA/WPA2 - Personal (Recommended). It includes the following fields and options:

- Version:** WPA2-PSK
- Encryption:** AES
- Wireless Password:** SU CONTRASEÑA (with a note: (You can enter ASCII characters between 8 and 63 or Hexadecimal characters between 8 and 64.)
- Group Key Update Period:** 0 Seconds (with a note: (Keep it default if you are not sure, minimum is 30, 0 means no update)

Below these settings, the **WPA/WPA2 - Enterprise** option is visible but unselected.

Lo cambiamos y le damos a guardar.

#### Paso 5:

Finalmente entramos en las redes de nuestro sistema operativo.

Windows XP, Windows Vista, Windows 7... Buscamos nuestra red y colocamos la nueva clave para conectarnos vía WiFi a Internet.