

# Cambio de contraseña en router TENDA N300

## Paso 1:

Para configurar la nueva contraseña debemos entrar en el router, y para ello colocamos en la barra del navegador la siguiente dirección IP [192.168.0.1](http://192.168.0.1).



## Paso 2:


Cuando hayamos colocado la IP en la barra de navegación y demos clic a la tecla de entrar nos pedirá las claves para acceder al router que son por defecto:

Nombre de usuario: [admin](#)

Contraseña: [admin](#)

## Paso 3:

En este paso, ya hemos entrado al router inalámbrico, lo que vamos a hacer a continuación es ir al apartado de Wireless/Wireless Security, que está en el menú desplegable de la izquierda.

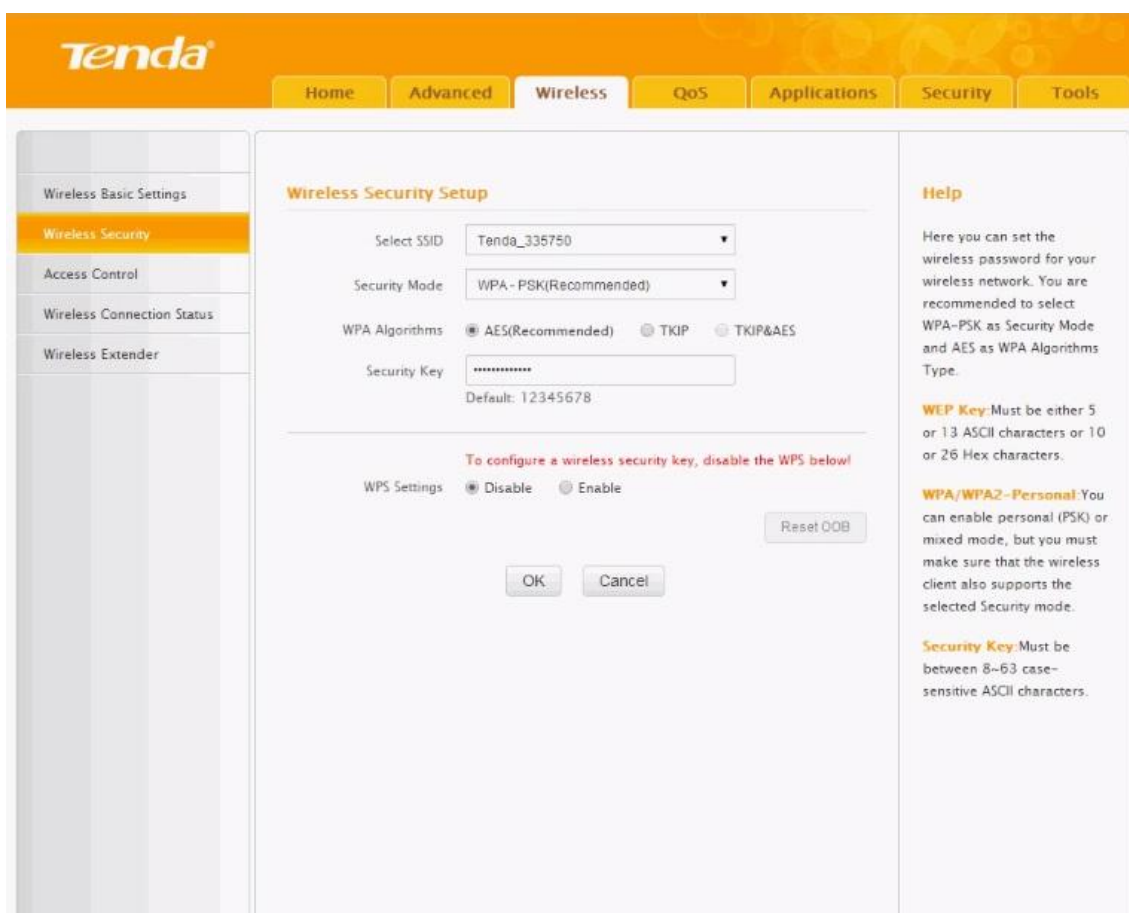

#### Paso 4:

Por defecto nos vendrá a una contraseña, pero podemos cambiarla a nuestra comodidad en “Security Key” o “Clave de seguridad”:

The screenshot displays the 'Wireless Security Setup' configuration interface. On the left, a sidebar menu includes 'Wireless Basic Settings', 'Wireless Security' (highlighted), 'Access Control', 'Wireless Connection Status', and 'Wireless Extender'. The main content area is titled 'Wireless Security Setup' and contains the following fields and options:

- Select SSID: Tenda\_335750
- Security Mode: WPA - PSK(Recommended)
- WPA Algorithms:  AES(Recommended),  TKIP,  TKIP&AES
- Security Key: [masked with asterisks]
- Default: 12345678

A red warning message reads: "To configure a wireless security key, disable the WPS below!". Below this, the WPS Settings are set to  Disable and  Enable. At the bottom right, there is a 'Reset OOB' button. At the bottom center, there are 'OK' and 'Cancel' buttons.

Lo cambiamos y le damos a guardar.

#### Paso 5:

Finalmente entramos en las redes de nuestro sistema operativo. Windows XP, Windows Vista, Windows 7... Buscamos nuestra red y colocamos la nueva clave para conectarnos vía WiFi a Internet.